




## Wall: Timber construction *Windtight and rainproof on the outside*

### Outdoor base joint



- Shake **SIGA-Dockskin**
- Apply a covering coat
- Depending on temperature and substrate, wait 5 - 20 minutes until Dockskin is transparent and sticky

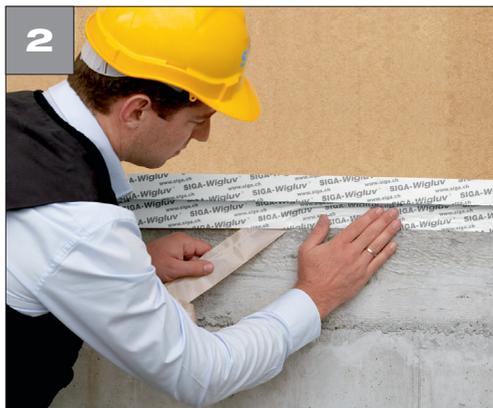

- Apply Wigluv in the middle, align
- Peel off backing strips one after the other, press down
- **Note:** make sure to apply sufficient Wigluv on the concrete and woodfibre boards




**Dockskin®**

P. 119

**Wigluv® 100 & 150**

P. 122

## Wall: Timber construction Windtight and rainproof on the outside




### Alternatively:



- Apply Primur roll, align and press it down
- Remove backing strip
- Apply facade membrane free of tension and creases and press it down vigorously

### Alternatively:

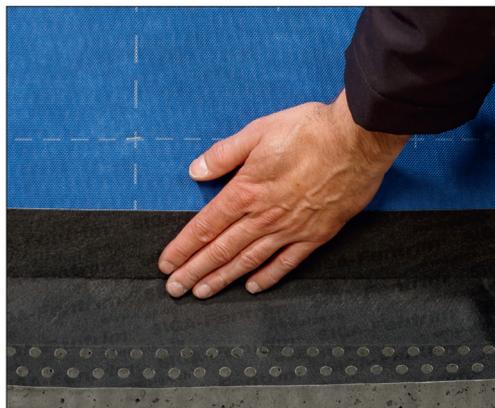

- Affix 50 mm side to facade membrane
- Affix perforated 85 mm side to concrete base
- Apply free of tension and creases and press it down vigorously



**Primur**<sup>®</sup> roll

P. 115



**Fentrim**<sup>®</sup> 2 50/85

P. 129