





Wall: Solid construction *Airtight on the inside*

Mounting vapour control layer on pre-wall structures

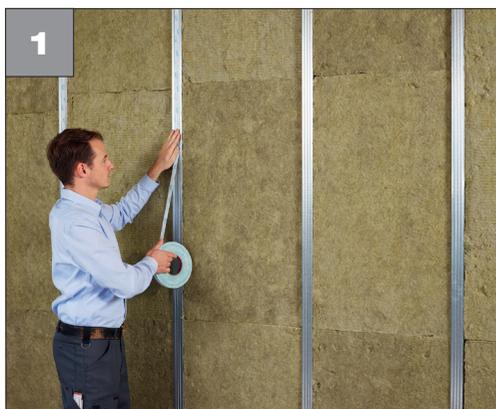

- Use double-sided adhesive Twinet when mounting vapour control layers on metal or timber substructures
- Avoids leaky stapling points



- Apply vapour control layer with the writing facing you

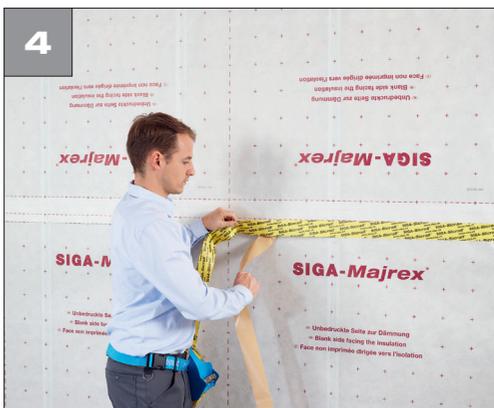

- Overlap the vapour control layer by approx. 10 cm

- Seal overlap with Sicrall avoiding tension and wrinkles

Wall: Solid construction *Airtight on the inside*

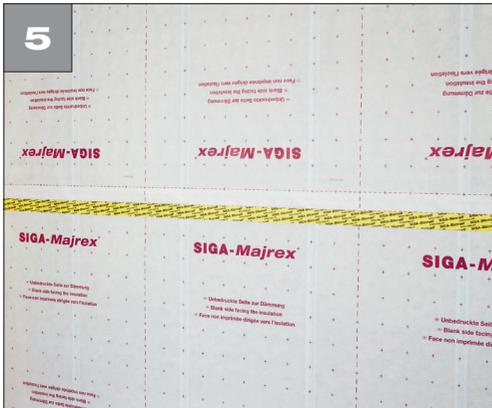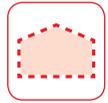

How it should look:

- Vapour control layer mounted on substructure and bonded to be permanently airtight



Majrex®

P. 108

Majpell® 5

P. 109

Twinet®

P. 118