


## Wall: Timber construction *Airtight on the inside*

### Mounting vapour control layer on timber substructures



- Use double-sided adhesive Twinet when mounting vapour control layers on timber substructures
- Avoids leaky stapling points

- Apply vapour control layer with the writing facing you


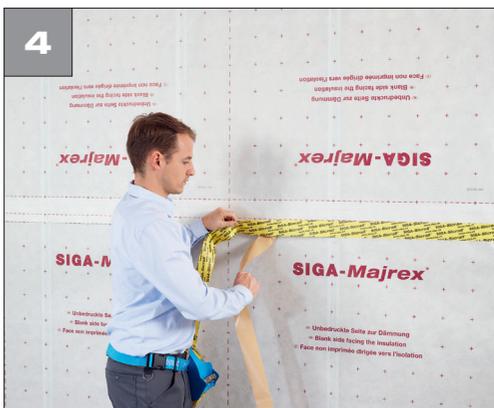


- Overlap the vapour control layer by approx. 10 cm

- Seal overlap with Sicrall avoiding tension and wrinkles

# Wall: Timber construction

## Airtight on the inside

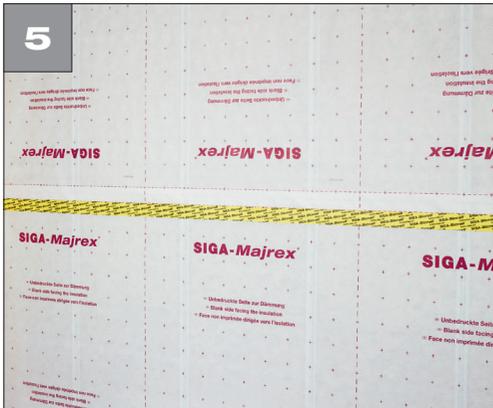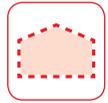

### How it should look:

- Vapour control layer mounted on substructure and bonded to be permanently airtight



**Majrex®**

P. 108

**Majpell® 5**

P. 109

**Twinet®**

P. 118